


WURKKOS

USER MANUAL

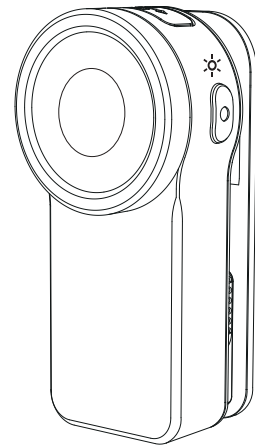

HD03

IN THE BOX:

HD03, Lanyard Loop, User Manual, Type-C Charging Cable, Dust-proof Bag

Table 1 (Specifications)

RGB Light Mode	
RGB	10h
Spotlight Mode	
Turbo 680 lumens	1h 10min
High 320 lumens	1h 20min
Medium 110 lumens	2h 10min
Low 20 lumens	7h 40min
Moonlight 1 lumens	36h
Floodlight Mode	
Turbo 320 lumens	1h 10min
High 150 lumens	1h 20min
Medium 75 lumens	1h 50min
Low 15 lumens	5h 30min
Moonlight 1 lumens	35h

3,500cd	180m	IPX6	1.5m
(L)60*(W)28*(H)25.2mm (L)23.6*(W)11*(H)9.9in		49g/1.72oz Battery included	

Table 2 (Cable)

Input	Type-C 5V/500mA(max)
Time to fully charge	About 1h 20min

Figure 1 Product Overview



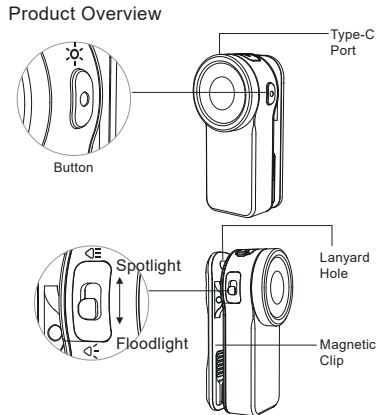


Figure 2 Indicator light

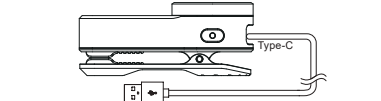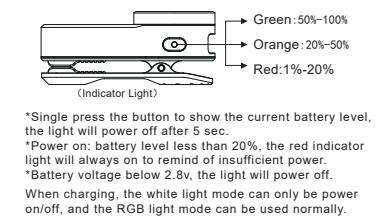

The following are examples of operational symbols

Figure 3 Lock/Unlock

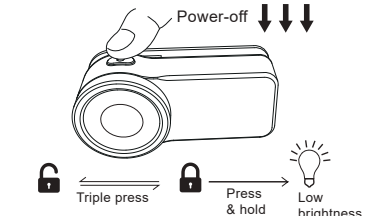


Figure 4 Change the spotlight/floodlight

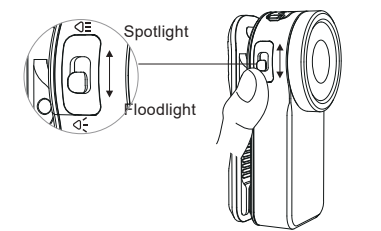


Figure 5 Change among 3 brightness levels

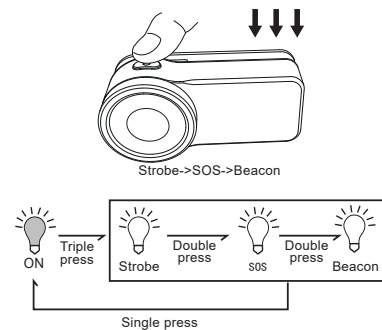


Figure 5.1 Change among 4 brightness levels

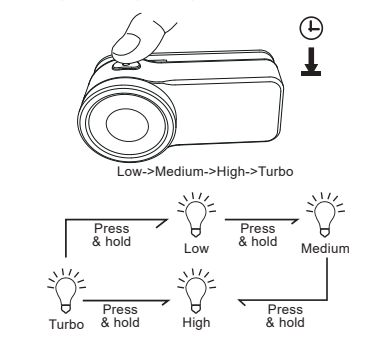


Figure 5.2 Quickly change to Turbo brightness level

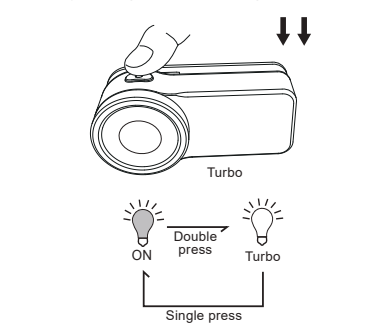


Figure 6 Change to RGB mode

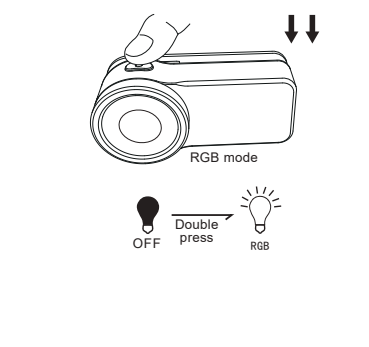


Figure 6.1 RGB mode



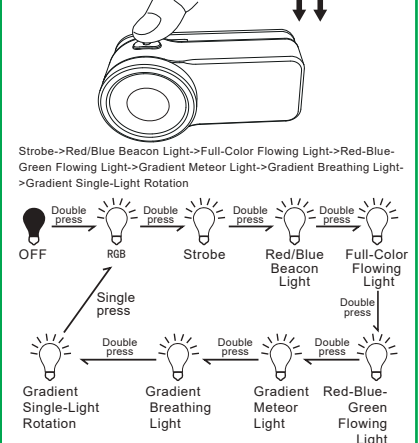


Figure 6.2 Change to the stepless gradient dimming of RGB mode

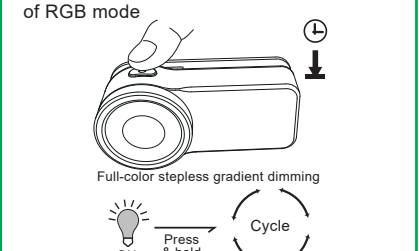

Operational Flowchart

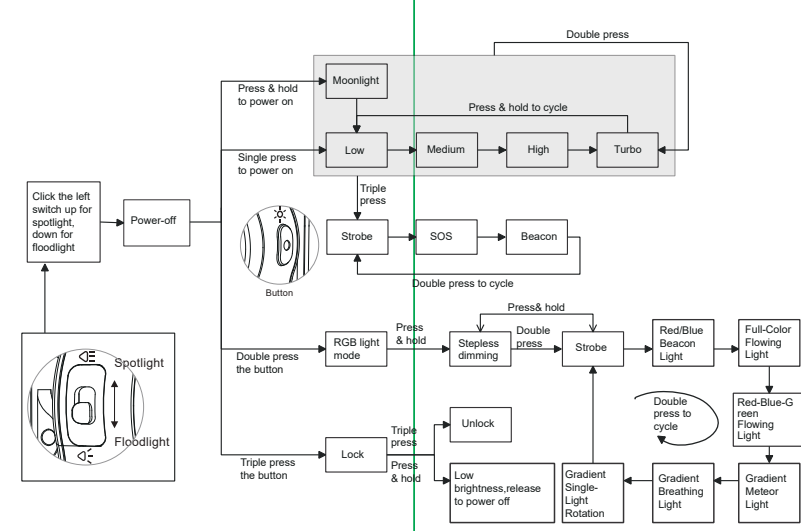

(EN)English

1. Please refer to Table 1 and Table 2 for product specifications;
2. Product overview, see Figure 1
3. Charge, see Figure 2
4. Lock/Unlock, see Figure 3
 When the light is off, quickly triple press the right button until you see the low-brightness of white light mode(flash twice), the light has then been locked out.
 When the light is locked, press and hold the right button can activate the low-brightness level for emergency lighting, and upon releasing the button, the light will automatically power off.
 All other operations will trigger two rapid flashes to show the button is locked.
 When the light is locked, quickly triple press the right button to unlock, which will directly power on and enter the white light mode.
5. Change the spotlight/ floodlight, see Figure 4

Click the left switch up for spotlight mode, down for floodlight mode.
6. In the white light mode, operations under spotlight/floodlight:
 Triple press the right button to enter the Strobe brightness level for the current setting.
 Double press will cycle through the following modes sequentially: Strobe Brightness → SOS → Beacon. Single press reverts to the previous brightness level. **See Figure 5**
 When the light is on, press and hold the right button to cycle through the brightness levels. The order of brightness is Low, Medium, High, then Strobe. **See Figure 5.1**
 When the light is on, double press the right button to enter the Turbo brightness level of the current setting (if already in the Turbo brightness level, double-press will trigger a single flash to confirm). **See Figure 5.2.**

7. Change to RGB mode: see Figure 6
 When the light is off, double press the right button to switch to the RGB light mode.
8. In the RGB mode, operation guide:
 Double press the right button to enter the Strobe brightness level under the currently selected color. Then double press again to cycle through the following light colors sequentially: Strobe → Red/Blue Beacon Light → Full-Color Flowing Light → Red-Blue-Green Flowing Light → Gradient Meteor Light → Gradient Breathing Light → Gradient Single-Light Rotation. When in the Strobe brightness level, single press will return to the previously selected color. **See Figure 6.1**
 When the flashlight is on, press and hold the right button to enable full-color stepless gradient dimming; release it to select the current color. If you miss the desired color, release the button and then press and hold

again to trigger a reverse color cycling. **See Figure 6.2**
9. On/Off:
 When the light is off and unlocked, single press the right button to power on (defaults to low brightness level in white light mode).
 When the light is off and unlocked under the white light mode, press and hold the right button to enter the moonlight brightness level.
 When the light is off and unlocked, double press the right button to power on, then enter the memory color in RGB light mode.
 When in cycling (the light is on), single press to power off and enter sleep mode.
CAUTION Maintain a charge every six months to protect the battery and prolong its service life.
 When the flashlight is off, quickly double-press the right button to lock,

preventing accidental triggering.
 Do not look directly at the light source or shine it into your eyes, as it may cause temporary blindness or permanent damage to your eyes.
 The clip is magnetic, and the metal powder absorbed on the surface will affect the function, please clean it immediately.
NOTICE
 Please only use Type-C charging cable to charge the product to avoid damage.
 When the battery level is low, recharge promptly to avoid prolonged storage with a depleted battery, which may damage the battery and compromise its performance.
 This ensures proper functionality for subsequent use.
 After charging is completed, ensure the waterproof cap is reattached and pressed firmly to prevent water or foreign objects from entering.

(CN)简体中文
 1.产品参数参见Table 1和Table 2。
 2.产品概述, 参见Figure 1。
 3.充电, 参见Figure 2。
 4.锁键/解锁, 参见Figure 3。
 在关机状态下, 快速三击开关, 白光低亮快速闪烁两次提示进入锁定状态;
 锁定状态下, 长按开关可开启低亮档应急照明, 当松开按键后手电将自动关闭输出。
 其他按键操作均以白光快速闪烁两次以提示处于按键锁定状态。
 快速三击开关, 即可解除锁定, 解锁后直接开机进入白光档位。
 5.切换聚光/泛光模式, 参见Figure 4。
 上拨左边开关切换至聚光模式, 下拨切换至泛光模式。
 6.白光模式下, 聚光/泛光模式操作指引:
 三击开关, 进入爆闪模式, 再次双击以爆闪->SOS->信标依次循环换档。闪烁模式下单击, 则返回进入闪烁功能前的照明档位, 参见Figure 5。
 白光模式下, 长按开关, 即可按低亮档->中亮档->高亮档->极亮档的顺序循环调节亮度。参见Figure 5.1。
 白光模式下, 双击开关, 即可进入当前模式的极亮档(当本身处于极亮档输出时再次双击, 则闪烁一次提示处于极亮档状态), 参见Figure 5.2。

7.切换白光&RGB模式, 参见Figure 6。
 关机状态下, 双击右边开关, 即可切换至RGB模式。
 8.RGB模式下操作指引:
 双击开关, 即可在当前选定的颜色下, 进入闪烁功能, 进入闪烁模式后, 再次双击以当前颜色闪烁->警闪->全彩流光->红蓝绿流光->渐变流星->渐变呼吸->渐变单灯转圈依次循环换档。闪烁模式下单击, 则返回进入闪烁功能前的选定颜色。参见Figure 6.1。
 长按开关, 即可以全彩无极渐变切换, 松手即可选定当前颜色。如果错过想要选定的颜色, 可以松开按键后, 再次长按实现反向变色循环, 重新选择颜色。参见图6.2。
 9.开机/关机:
 关机未锁定且在白光模式下, 单击侧面轻触开关, 进行开机操作(白光模式下默认进入低亮档)。
 关机未锁定且在白光模式下, 长按侧面轻触开关, 开机进入白光月光档位。
 关机未锁定状态下, 双击侧面轻触开关, 开机进入彩光模式的记忆颜色。
 开机且在循环档位下, 单击侧面开关则执行关闭手电, 关闭后手电将自动进入休眠状态。
注意: 请保持半年内给产品充电一次, 有效保护电池, 延长使用寿命。
 在产品不使用的情况下可快速双击按键锁定按键, 这样可以更有效的避免产品的误触发。
 请勿直视光源或照射眼睛, 将导致眼睛短时致盲, 严重时损伤视网膜。

背夹具有磁性, 吸附在表面的金属粉末会影响吸力, 请及时清除。
提示:
 请仅使用Type-C充电线为产品充电, 以免损坏。
 如果电池电量不足, 请及时充电, 避免长时间亏电存放而损伤电池, 同时也可以保证下次正常使用。
 充电完成后请将防水帽重新盖回按紧, 避免水或者其他杂物进入。
LEARN MORE